## SERIES PS1000/1100




# Pressure Sensor Series PS1000/1100

- ✓ Very compact
- Lightweight and robust
- ✓ Vacuum or pressure
- ✓ Adjustable

#### TECHNICAL **SPECIFICATIONS** SERIES PS1000/1100

Air -0.1-1.0MPa -0.45MPa -0.45MPa -0.1-0.4MPa ≤4%F.S. ≤3%F.S. ≤±1%F.S. DC12-24V (Ripple ≤±10%) 5-40mA ≤1mA
-0.45MPa -0.1-0.4MPa ≤4%F.S. ≤3%F.S. ≤±1%F.S. DC12-24V (Ripple ≤±10%) 5-40mA
≤4%F.S. ≤3%F.S. ≤±1%F.S. DC12-24V (Ripple ≤±10%) 5-40mA
≤3%F.S. ≤±1%F.S. DC12-24V (Ripple ≤±10%) 5-40mA
≤±1%F.S. DC12-24V (Ripple ≤±10%) 5-40mA
DC12~24V (Ripple ≤±10%) 5~40mA
5-40mA
≤1mA
≤5V
t pressure ≥ Present pressure ≤ ressure: ON Set pressure: ON
ON: Red LED turns on
0~60°C
Ø6 reducer
Grommet type oil-proof captyre-cord
two wires Ø2.55, 0.18mm², 3m



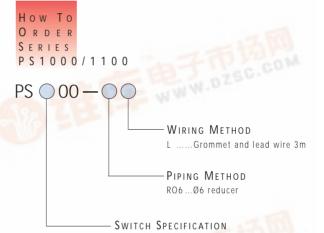


10 ....Two-wire (press) Set Press < Present Press: ON .Two wire (For remaining press or vacuum) Set Press: ON


#### STOCKED PRODUCTS FOR A LIST OF STOCKED PRODUCTS, PLEASE SEE THE CURRENT SMC PRICE LIST

### DIMENSIONS PS1000/1100

## 3000 AIRCHECKER PS1000-R06L Pressure setting trimmer LED indicator

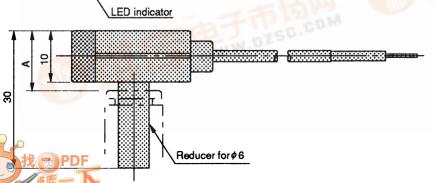

#### SWITCH OUTPUT FUNCTION

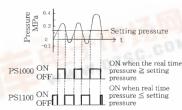

- 3. Setting of Pressure Switch

   By setting the pressure trimmer, pressure is set.

   Pressure becomes bigger at the clockwise direction, and for the high vacuum rate, turn the trimmer to the counter-
- clockwise direction.

  Please use the  $\bigcirc$ driver which has the adequate size for the trimmer, and turn it easy with fingertips.



Setting Trimmer