

# MAX2622/MAX2623/MAX2624 Evaluation Kits

#### **General Description**

The MAX2622/MAX2623/MAX2624 evaluation kits (EV kits) simplify evaluation of the MAX2622/MAX2623/ MAX2624 VCOs. These kits enable testing of the devices' RF performance and require no additional support circuitry. The signal output uses an SMA connector to facilitate the connection to RF test equipment.

### Component List

DESIGNATION	QTY	DESCRIPTION		
C2, C3, C4, C8	4	220pF ±5% ceramic capacitors (0603) Murata GRM39COH0G221J50		
C6	1	$0\Omega$ resistor (0603)		
C7	1	0.1µF ±5% ceramic capacitor (0603) Taiyo Yuden EMK107BJ104KA		
R1, R2	2	1kΩ ±5% resistors (0603)		
OUT	1	SMA connector (PC edge mount) EFJohnson 142-0701-801 or Digi-Key J502-ND		
JU1	4	3-pin headers		
U1	1	MAX2622EUA, MAX2623EUA, or MAX2624EUA		

## **Component Suppliers**

SUPPLIER	PHONE	FAX
Murata Electronics	800-831-9172	814-238-0490
Taiyo Yuden	408-573-4150	408-573-4159

NOTE: Please indicate that you are using the MAX2622, MAX2623, or MAX2624 when contacting these component suppliers.

#### Quick Start

The MAX2622/MAX2623/MAX2624 EV kits are fully assembled and factory tested. Follow the instructions in the Connections and Setup section for proper device evaluation.

#### **Features**

- ◆ Easy Evaluation of MAX2622/MAX2623/MAX2624
- ♦ +2.7V to +5.5V Single-Supply Operation
- ♦ RF Output Matched to 50Ω
- **♦ All Critical Peripheral Components Included**

### Ordering Information

PART	TEMP. RANGE	IC-PACKAGE
MAX2622EVKIT	-40°C to +85°C	8 µMAX
MAX2623EVKIT	-40°C to +85°C	8 µMAX
MAX2624EVKIT	-40°C to +85°C	8 µMAX

#### **Test Equipment Required**

This section lists the recommended test equipment to verify operation of the MAX2622/MAX2623/MAX2624. It is intended as a guide only, and some substitutions are possible.

- A two-channel power supply at +2.7V to +5.5V
- An ammeter (optional)
- An RF spectrum analyzer (HP 8561E, for example) that covers the operating frequency range of the MAX2622/MAX2623/MAX2624, as well as a few harmonics
- A  $50\Omega$  SMA cable

## **Connections and Setup**

This section provides a step-by-step guide to the functions and operation of these EV kits.

- 1) Connect a DC supply set to +3V (through an ammeter, if desired) to the VCC and GND terminals on the
- 2) Apply +3V to the SHDN control input.
- 3) Turn on the DC supply. The supply current should read about 8mA.
- 4) Connect the VCO output to a spectrum analyzer with a  $50\Omega$  coaxial cable.
- 5) Apply a variable DC voltage to the TUNE input (+0.4V to +2.4V).
- 6) Check fmin and fmax on the spectrum analyzer by varying the tuning voltage.
- 7) Check the output power level (-3dBm typ).



# MAX2622/MAX2623/MAX2624 Evaluation Kits

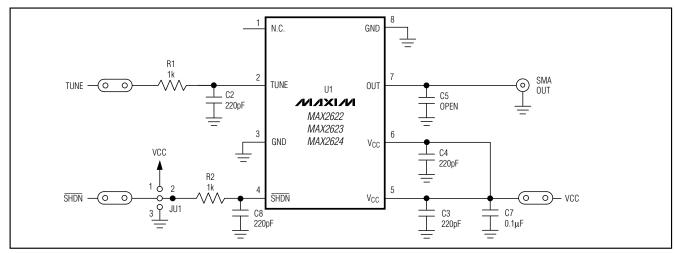


Figure 1. MAX2622/MAX2623/MAX2624 EV Kits Schematic

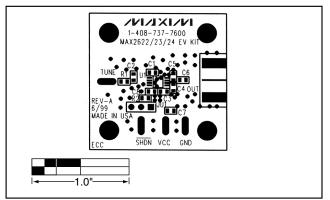


Figure 2. MAX2622//MAX2623/MAX2624 EV Kits Component Placement Guide—Component Side

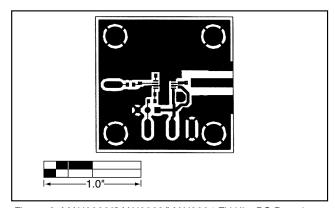


Figure 3. MAX2622//MAX2623/MAX2624 EV Kits PC Board Layout—Component Side

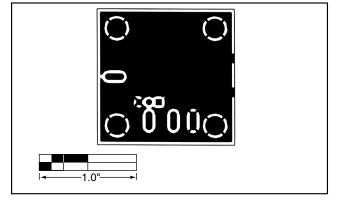


Figure 4. MAX2622/MAX2623/MAX2624 EV Kits PC Board Layout—Ground Plane

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

2 \_\_\_\_\_\_Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600