



NS2002BK

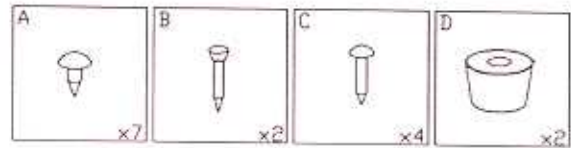


Step1

Secure Metal Track to the work surface. (Using wood screws "A" and screw "B"+plastic bumper "D")

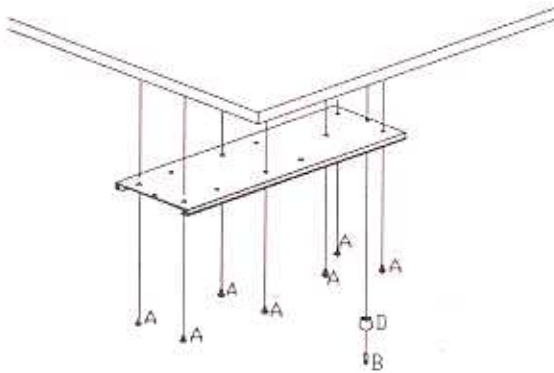


Step2

Attach Molded Platform to the Support Arm. (using screws "C")

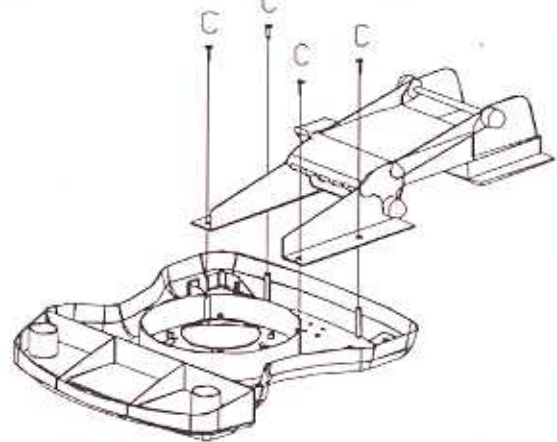


Step3

Slide Support Arm into Metal Track.

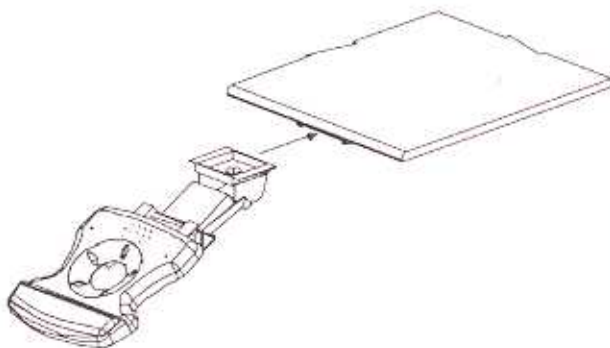

Step4

Make a stopper (using screw "B" +plastic bumper "D")

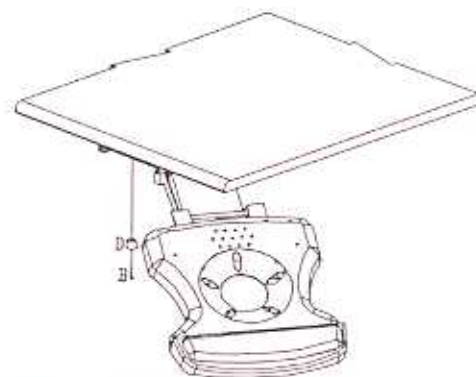

Step5

