# RITOKO

TK15321

Audio Analog Switch

#### **FEATURES**


- Wide Operating Voltage Range (3 to 14 V)
- Low Distortion (typ. 0.004%)
- Wide Dynamic Range (typ. 6 V<sub>p.p</sub>)
- Low Switching Noise (typ. 3 mV)


#### **APPLICATIONS**

- Audio Systems
- Radio Cassettes

#### DESCRIPTION

The TK15321M is an Analog Switch IC that was developed for audio frequency. Function is to select one output from two inputs in a device that includes two circuits, and the channel can be changed by low level. The TK15321M has a mono-power supply and the input bias is a built-in type  $(V_{CC}/2V)$ . Because the distortion is very low, the TK15321M fits various signals switching. It is best suited for Hi-Fi devices. Operating voltage is wide, the circuit plan is simple. The TK15321M is available in a small plastic surface mount package (SSOP-12).

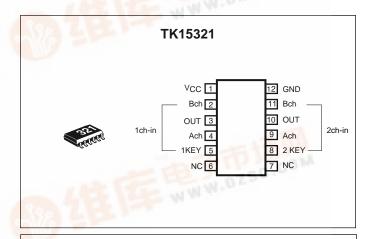

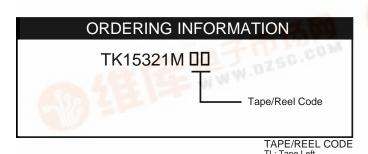

**BLOCK DIAGRAM** Reg. (V<sub>CC</sub> / 2) ≱ 2KE GND ≸

May 1999 TOKO, Inc.

## TK15321

#### **ABSOLUTE MAXIMUM RATINGS**

Supply Voltage 15 V	ANALOG SWITCH SECTION
Power Dissipation (Note 4) 350 mW	Signal Input Voltage0.3 V to V <sub>cc</sub> +0.3 V
Storage Temperature Range55 to +150 °C	Signal Output Current 3 mA
Operating Temperature Range20 to +75 °C	
CONTROL SECTION	Operating Voltage Range 3 to 14 V
Input Voltage0.3 V to $V_{\rm cc}$ +0.3 V	Maximum Input Frequency100 kHz

### **TK15321M ELECTRICAL CHARACTERISTICS**


Test conditions:  $V_{CC}$  = 8.0 V,  $T_A$  = 25 °C, unless otherwise specified.

SYMBOL	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNITS		
I <sub>cc</sub>	Supply Current			4.2	6.5	mA		
KEY CONT	KEY CONTROL SECTION							
V <sub>IL</sub>	Input Voltage Low Level	Note 1	-0.3		+0.8	V		
V <sub>IH</sub>	Input Voltage High Level		1.8		V <sub>cc</sub> + 0.3	V		
I <sub>OKEY</sub>	Output Current	To GND			30	μA		
I <sub>IKEY</sub>	Inflow Current	From V <sub>CC</sub>			30	μA		
ANALOG SWITCH SECTION								
THD	Total Harmonic Distortion	V <sub>IN</sub> = 1 Vrms, f = 1 kHz		0.004	0.008	%		
N <sub>L</sub>	Residual Noise	Note 2			10	μVrms		
ISO	Isolation	$V_{IN} = 1 \text{ Vrms}, F = 10 \text{ kHz},$ Note 3			-75	dB		
SEP	Separation	$V_{IN} = 1 \text{ Vrms}, f = 10 \text{ kHz},$ Note 3			-80	dB		
DYN	Maximum Input Signal Level	f = 1 kHz, THD = 0.1%	2.0			Vrms		
GVA	Voltage Gain	f = ~20 kHz		0		dB		
V <sub>cent</sub>	Input-Output Terminal Voltage	V <sub>cc</sub> / 2 output	3.8	4.0	4.2	V		
$\Delta V_{ m cent}$	Output Terminal Voltage Difference	Between same channel		3	13	mV		
R <sub>IN</sub>	InputBias Resistance			65		kΩ		
Z <sub>out</sub>	Output Impedance	DC Impedance		20		Ω		


Note 1: The KEY input equivalent circuit is shown to the right.

1 channel and 2 channel is the separate action by 1Key pin and

- Note 2: The specification means a value as measurement-input terminal connects to ground through a capacitor.
- Note 3: ISO is a cross talk between A channel and B channel, SEP is a cross talk between 1 channel and 2 channel. The specification means a value as measurement-input termianl connects to ground through 10  $k\Omega$  resistor and capacitor.
- Note 4: Power dissipation is 350 mW when mounted as recommended. Derate at 3.0 mW/°C for operation above 25°C.

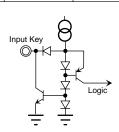

<sup>2</sup> key pin. When the control pin is open, it is outputted high level (about 1.4 V). Then the A channel input signal is outputted. The change is carried out at low level.

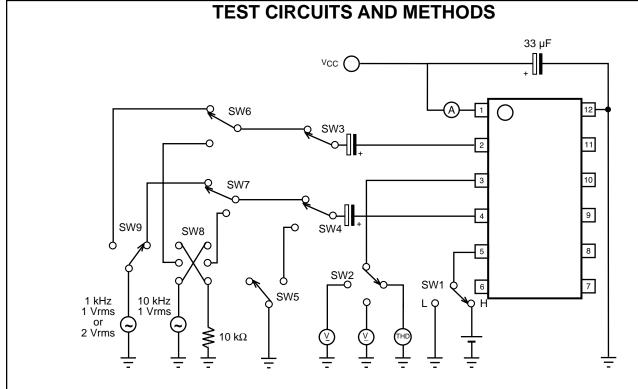

- 1: The above condition represents 1ch.
- 2: The above conditions distortion rate of 1-Ach and dynamic range measurement.
- 3: SW5 is for residual noise measurement.
- 4: SW8 is for cross talk (ISO or SEP) measurement.

#### **SUPPLY CURRENT (FIGURE 1)**

This current is a consumption current with a nonloading condition.

1) Measure the inflow current to Pin 1 from V<sub>cc</sub>. This current is the supply current.

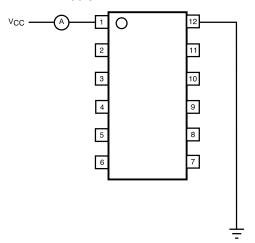



Figure 1

#### **CONTROL LOW/HIGH LEVEL (FIGURE 2)**

This level is to measure the threshold level.

- 1) Input, the V<sub>CC</sub> to Pin 1. (This condition is the same with other measurements, omitted from the next for simplicity)
- 2) Input to Pin 4 with sine wave (f = 1 kHz,  $V_{IN}$  = 1 Vrms).
- 3) Connect an oscilloscope to Pin 3.
- 4) Elevate the control voltage from 0 V gradually, until the sine wave appears at the oscilloscope. This voltage is the threshold level when the wave appears.


May 1999 TOKO, Inc.

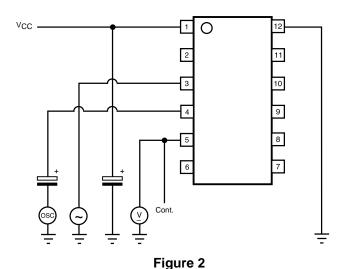

#### **CONTROL OUTFLOW/INFLOW CURRENT (FIGURE 3)**

This current means the maximum current with the control.

- 1) Measure the current from Pin 5 to GND. This current is the outflow current.
- 2) Next, measure the current from  $V_{\rm CC}$  to Pin 5. This current is the inflow current.

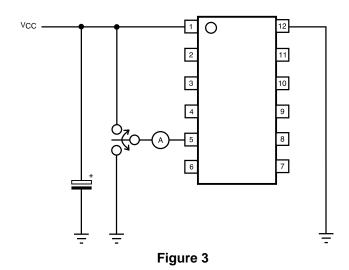

Use the lower distortion oscillator for this measurement because distortion of the TK15321 is very low.

1) Pin 5 is in the open condition, or high level.

**TOTAL HARMONIC DISTORTION (FIGURE 4)** 

- 2) Connect a distortion analyzer to Pin 3.
- 3) Input the sine wave (1 kHz, 1 Vrms) to Pin 4.
- 4) Measure the distortion of Pin 3. This value is the distortion of 1-Ach.
- 5) Next connect Pin 5 to the GND, or low level.
- 6) Input the same sine wave to Pin 2.
- 7) Measure in the same way. This value is the distortion of 1-Bch.

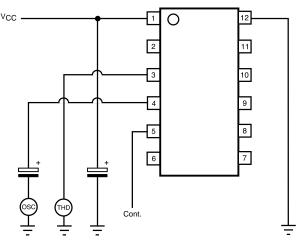


Figure 4

#### **VOLTAGE GAIN (FIGURE 5)**

This is the output level against input level.

- 1) Pin 5 is in the open condition, or high level.
- 2) Connect AC volt meters to Pin 4 and Pin 3. (Using the same type meter is best)
- 3) Input a sine wave (f = max. 20 kHz, 1 Vrms) to Pin 4.
- 4) Measure the level of Pin 4 and name this V1.
- 5) Measure the level of Pin 3 and name this V2.
- 6) Calculate Gain = 20 Log (( |V2 V1| )/V1) V1<V2 + Gain, V1>V2 Gain This value is the voltage gain of 1-Ach.
- 7) Next, connect Pin 5 to the GND, or low level.
- 8) Input the same sine wave to Pin 2.
- 9) Measure and calculate in the same way. This value is the voltage gain of 1-Bch.

Page 4 May 1999 TOKO, Inc.

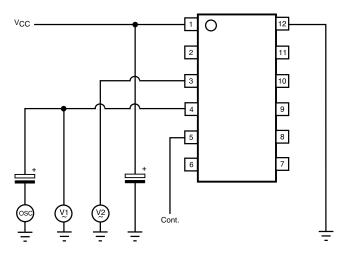


Figure 5

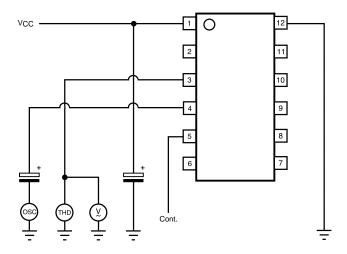


Figure 6

#### **MAXIMUM INPUT LEVEL (FIGURE 6)**

This measurement measures at output side.


- 1) Pin 5 is in the open condition, or high level.
- 2) Connect a distortion analyzer and an AC volt meter to Pin 3.
- 3) Input a sine wave (1 kHz) to Pin 4 and elevate the voltage from 0 V gradually until the distortion gets to 0.1%.
- 4) When the distortion amounts to 0.1%, stop elevating and measure the AC level of Pin 3.
  - This value is the maximum input level of 1-Ach.
- 5) Next, connect Pin 5 to the GND, or low level.
- 6) Input the same sine wave to Pin 2.
- Measure in the same way.
   This value is the maximum input level of 1-Bch.

#### **RESIDUAL NOISE (FIGURE 7)**

This value is not S/N ratio. This is a noise which occurs from the device itself.

- 1) Pin 5 is the open condition, or high level.
- 2) Connect an AC volt meter to Pin 3.
- 3) Connect a capacitor from Pin 4 to GND.
- 4) Measure AC voltage of Pin 3. This value is the noise of 1-Ach. If the influence of noise from outside exists, use optional filters.
- 5) Next, connect Pin 5 to the GND, or low level.
- 6) Connect to GND through a capacitor from Pin 2.
- Measure in the same way.
   This value is the noise level of 1-Bch.

May 1999 TOKO, Inc. Page 5

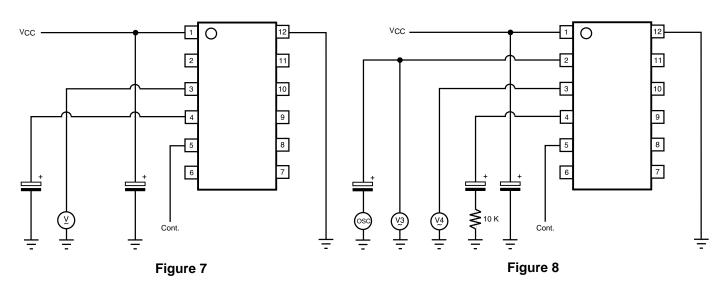

#### **ISOLATION (FIGURE 8)**

This is the cross talk between Ach and Bch.

- 1) Pin 5 is in the open condition, or high level.
- 2) Connect AC volt meters to Pin 2 and Pin 3.
- Connect a capacitor and a resistance in series to GND from Pin 4.
- 4) Input a sine wave (10 kHz, 1 Vrms) to Pin 2.
- 5) Measure the level of Pin 2 and name this V3.
- 6) Measure the level of Pin 3 and name this V4.
- 7) Calculate:

ISO = 20 Log (V4 / V3)

This value is the isolation to Ach from Bch.

- 8) Next, connect Pin 5 to the GND, or low level.
- 9) Change line of Pin 2 and Pin 4.
- 10) Input the same sine wave to Pin 4.
- 11) Measure and calculate in the same way.
  This value is the isolation to Bch from Ach.

#### **SEPARATION (FIGURE 9)**

This is the cross talk between 1ch and 2ch.

- 1) Control level is free for Pin 5 and Pin 8.
- 2) Connect AC volt meters to Pin 4 (or Pin 2) and Pin 10.
- 3) Connect Pin 9 and Pin 11 to GND through capacitors and a resistance.
- 4) Input a sine wave (10 kHz, 1 Vrms) to Pin 2 and Pin 4.
- 5) Measure the level of Pin 4 and name this V5.
- 6) Measure the level of Pin 10 and name this V6.
- 7) Calculate:

SEP = 20 Log (V6 / V5)

This value is the separation to 2ch from 1ch.

Page 6 May 1999 TOKO, Inc.

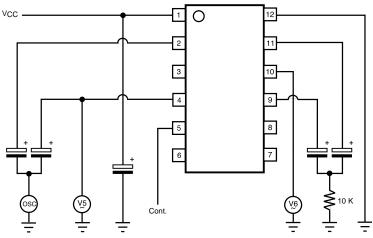


Figure 9

#### **OUTPUT TERMINAL DIFFERENCE**

This is the DC output voltage difference between Ach and Bch. This is calculated by using values measured at the I/O Terminal Voltage.

 $\Delta$  Vcent = | (1 - Ach value) - (1 - Bch value) | This value is the voltage difference of 1ch.

#### I/O TERMINAL VOLTAGE (FIGURE 10)

This is the DC voltage of input and output. Because the input and the output are nearly equal, only the output is measured.

- 1) Pin 5 is in the open condition, or high level.
- 2) Connect a DC volt meter to Pin 3 and measure. This value is the terminal voltage of 1-Ach.
- 3) Next, connect Pin 5 to the GND, or low level.
- Measure in the same way.
   This value is the terminal voltage of 1-Bch.


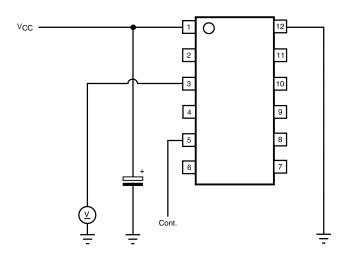


Figure 10

May 1999 TOKO, Inc. Page 7


## **TYPICAL PERFORMANCE CHARACTERISTICS**


 $\rm V_{\rm CC}$  = 8 V,  $\rm T_A$  = 25 °C, unless otherwise specified.

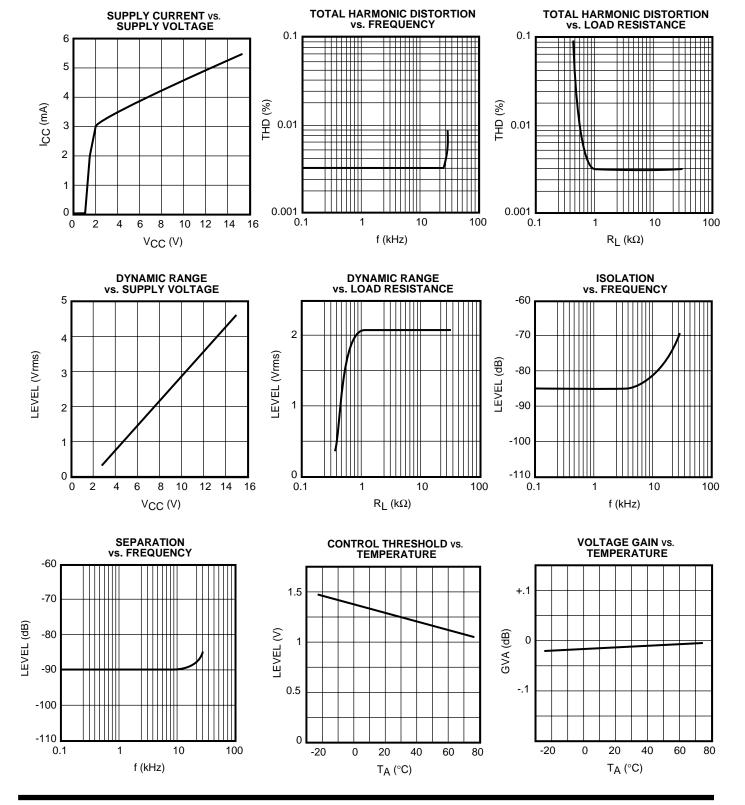

Page 8 May 1999 TOKO, Inc.

# TYPICAL PERFORMANCE CHARACTERISTICS (CONT.) $V_{CC}$ = 8 V, $T_A$ = 25 °C, unless otherwise specified.

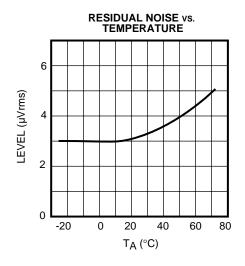

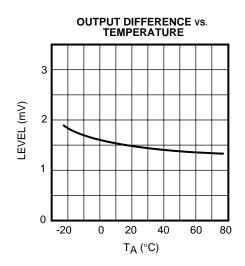

## **TERMINAL VOLTAGE AND CIRCUIT**

Condition:  $V_{cc} = 8 \text{ V}$ .

PIN NO.	ASSIGNMENT	DC VOLTAGE	CIRCUIT/FUNCTION
1	V <sub>cc</sub>	8 V	Supply Voltage Pin
2 4 9 11	IN A, IN B	4 V	Vcc /2 Signal Input Pin
3 10	OUT	4 V	Signal Output Pin
5 8	KEY	1.4 V	© — U — — — — — — — — — — — — — — — — —
12	GND	0 V	Ground Pin
6 7	NC	Floating	No Contact Pin

May 1999 TOKO, Inc. Page 9

#### APPLICATION INFORMATION

#### **KEY INPUT CIRCUIT**

1ch and 2ch is separate action by each control keys. Figure 11 is an equivalence circuit of key input. When terminal of key is the open, is outputting high level (about 1.4 V), and then Ach input signal is outputted. The channel at TK15321M can be changed by low level. When a control terminal was operated to low function, sometimes it may flow out maximum values about 30  $\mu$ A as current from the terminal. For this reason, please use a resistance which does not exceed 0.8 V when attaching a resistance to the outside and making a low condition.

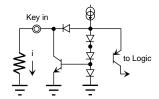


Figure 11

#### **SWITCHING TIME**

This time is the signal change response time compared to the control key input signal. Figure 12 illustrates the timing chart.  $T = 2 \mu s$  typically.

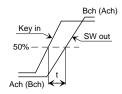


Figure 12

#### **APPLICATION**

Figure 13 illustrates an example of a typical application. The standard application is to use capacitor coupling at the inputs and output of the TK15321M. For characteristics of distortion and dynamic range versus  $R_{\rm L}$ , refer to the graphs in the Typical Performance Characteristics. The TK15321M can also be used with direct coupling, but the characteristics will get worse (distortion, etc.). If direct coupling is desired, then it is recommended to use external circuitry that is biased compatible with the TK15321M. Input of the TK15321M is the open base type.

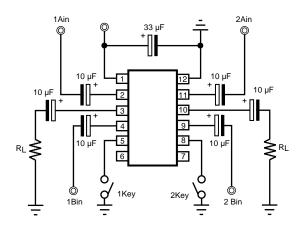


Figure 13

#### **CROSS TALK (ISOLATION AND SEPARATION)**

Figure 14 is an example of a layout pattern. In the application of the TK15321M, the following must be considered. Because of the high impedance at the inputs, the capacitors can act as antennas to each other. If the parts are bigger, and the space between the capacitors is too narrow, then cross talk will increase. Therefore, when designing the printed circuit pattern, separate the input capacitors as far as possible and use as small a part as possible (e.g., surface mount types, etc.).

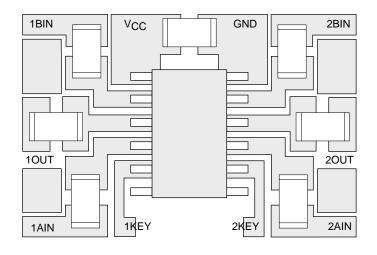


Figure 14

Page 10 May 1999 TOKO, Inc.

## **APPLICATION INFORMATION (CONT.)**

#### **OUTPUT TERMINAL VOLTAGE DIFFERENCE**

This parameter is the output voltage difference between Ach and Bch, and appears when the channel changes from Ach to Bch, or changes to the reverse. Generally, this is called Switching Noise or Pop Noise. If this value is big and if this noise is amplified by the final amplifier and is outputted by the speakers, then it appears as a Shock Sound. Output terminal voltage difference of the TK15321M is a value that adds the internal bias difference and the off-set voltage difference. The value of the TK15321M is very small; its maximum value is 13 mV. Toko can offer the "Muting IC" if users wish to mute Switching Noise.

#### **DIRECT TOUCH**

The signal input terminals:

Internal circuits are operated by constant current circuit, even if  $V_{cc}$  or GND is contacted, damage does not occur. The signal output terminal:

Outflow or inflow current is decided by ability of final transistor, but protection circuit is not attached. If GND or  $V_{cc}$  are contacted damage may occur. Pay attention to long time contact. Do not supply over the maximum rating. Referenced to GND, do not provide to all terminals over  $V_{cc}$  +0.3 V or -0.3 V.

#### DC SIGNAL INPUT


The output of the TK15321M has a saturation voltage (both  $V_{cc}$  and GND sides about 1.0 V); accordingly the use of a DC signal is not recommend (e.g., the pulse signal etc.)

#### **NC TERMINAL**

NC terminals are not wired inside IC by bonding wire. NC terminals are not tested so do not connect at outside.

May 1999 TOKO, Inc. Page 11

#### **PACKAGE OUTLINE**

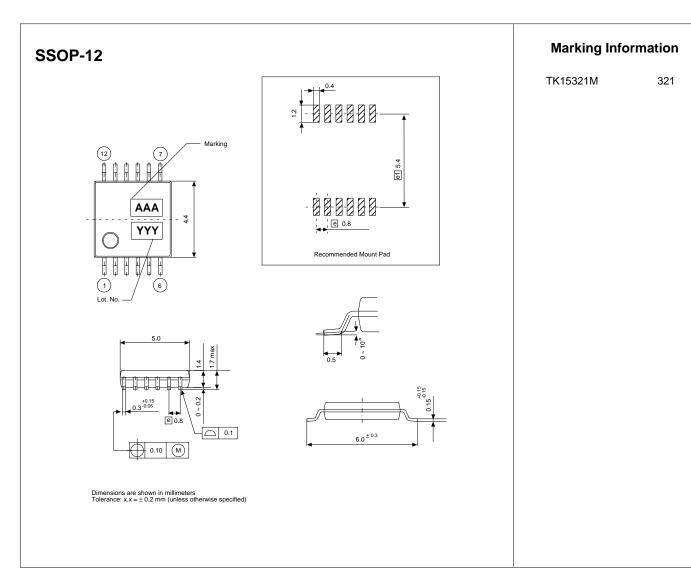

## RITOKO

Toko America, Inc. Headquarters 1250 Feehanville Drive, Mount Prospect, Illinois 60056 Tel: (847) 297-0070 Fax: (847) 699-7864

#### TOKO AMERICA REGIONAL OFFICES

Midwest Regional Office Toko America, Inc. 1250 Feehanville Drive Mount Prospect, IL 60056 Tel: (847) 297-0070 Fax: (847) 699-7864 Western Regional Office Toko America, Inc. 2480 North First Street , Suite 260 San Jose, CA 95131 Tel: (408) 432-8281 Fax: (408) 943-9790 Eastern Regional Office Toko America, Inc. 107 Mill Plain Road Danbury, CT 06811 Tel: (203) 748-6871 Fax: (203) 797-1223 Semiconductor Technical Support Toko Design Center 4755 Forge Road Colorado Springs, CO 80907 Tel: (719) 528-2200 Fax: (719) 528-2375

#### Visit our Internet site at http://www.tokoam.com

The information furnished by TOKO, Inc. is believed to be accurate and reliable. However, TOKO reserves the right to make changes or improvements in the design, specification or manufacture of its products without further notice. TOKO does not assume any liability arising from the application or use of any product or circuit described herein, nor for any infringements of patents or other rights of third parties which may result from the use of its products. No license is granted by implication or otherwise under any patent or patent rights of TOKO, Inc.

Page 12 May 1999 TOKO, Inc.