

MAXIM

MAX618 Evaluation Kit

General Description

The MAX618 evaluation kit (EV kit) is a constant-frequency, PWM, step-up switching regulator with an internal 2A, 28V n-channel MOSFET. The EV kit accepts a +3V to V_{OUT} input and converts it to a 12V output for currents up to 500mA. Conversion efficiency is greater than 90%. The EV kit operates at 250kHz, allowing the use of small external components.

The MAX618 EV kit is a fully assembled and tested surface-mount circuit board.

Component List

DESIGNATION	QTY	DESCRIPTION
C1, C2	2	68 μ F, 20V low-ESR tantalum caps AVX TPSE686M020R0150 or Sprague 593D686X0020E2W
C3	1	0.1 μ F ceramic capacitor
C4	1	4.7 μ F, 10V X5R ceramic capacitor Taiyo Yuden LMK316BJ475ML
C5	1	0.047 μ F ceramic capacitor
C6, C7	2	1 μ F, 25V X5R ceramic capacitors Taiyo Yuden TMK316BJ105KL
C8	1	68pF ceramic capacitor
D1	1	2A Schottky diode SGS-Thomson STPS2L25U, Nihon EC21QS03L, or Central Semiconductor CMSH2-40M
L1	1	15 μ H power inductor Sumida CDRH6D38-150 (shielded), Sumida CR75-150 (unshielded), or Sumida CDH74-150 (unshielded)
R1	1	715k Ω $\pm$ 1% resistor
R2	1	100k Ω $\pm$ 1% resistor
U1	1	MAX618EEE
JU1	1	3-pin header
None	1	Shunt
None	1	MAX618 PC board
None	1	MAX618 data sheet

Features

- ◆ +3V to V_{OUT} Input Voltage Range
- ◆ 12V or Adjustable Output Voltage
- ◆ Up to 500mA Output Current
- ◆ Internal 2A, 28V MOSFET Switch
- ◆ 3 μ A Shutdown Current
- ◆ 250kHz Switching Frequency
- ◆ Surface-Mount Components
- ◆ Fully Assembled and Tested

Ordering Information

PART	TEMP. RANGE	IC PACKAGE
MAX618EVKIT	0°C to +70°C	16 QSOP

Quick Start

The MAX618 EV kit is fully assembled and tested. Follow these steps to verify board operation. **Do not turn on the power supply until all connections are completed.**

- 1) Connect a +5V supply to the VIN pad. Connect ground to the GND pad.
- 2) Connect a voltmeter and load, if any, to the VOUT pad.
- 3) Place the shunt across JU1 pins 2 and 3.
- 4) Turn on the power supply to the board and verify that the output voltage is 12V.
- 5) For other output voltages, refer to the *Output Voltage Selection* section in the MAX618 data sheet for instructions on selecting feedback resistors R1 and R2, inductor L1, output capacitor C2, and compensation capacitors C5 and C8. **Note:** Input (C1) and output (C2) capacitors are rated at 20V.

Jumper Selection

The 3-pin header JU1 selects shutdown mode. Table 1 lists the selectable jumper options in shutdown mode.

Table 1. Jumper JU1 Shutdown Function

SHUNT LOCATION	$\overline{\text{SHDN}}$ PIN	MAX618 OUTPUT
1 & 2	Connected to GND	Shutdown mode, $V_{OUT} = V_{IN} - V_{DIODE}$
2 & 3	Connected to VL	MAX618 enabled, $V_{OUT} = 12V$

Evaluates: MAX618

MAX618 Evaluation Kit

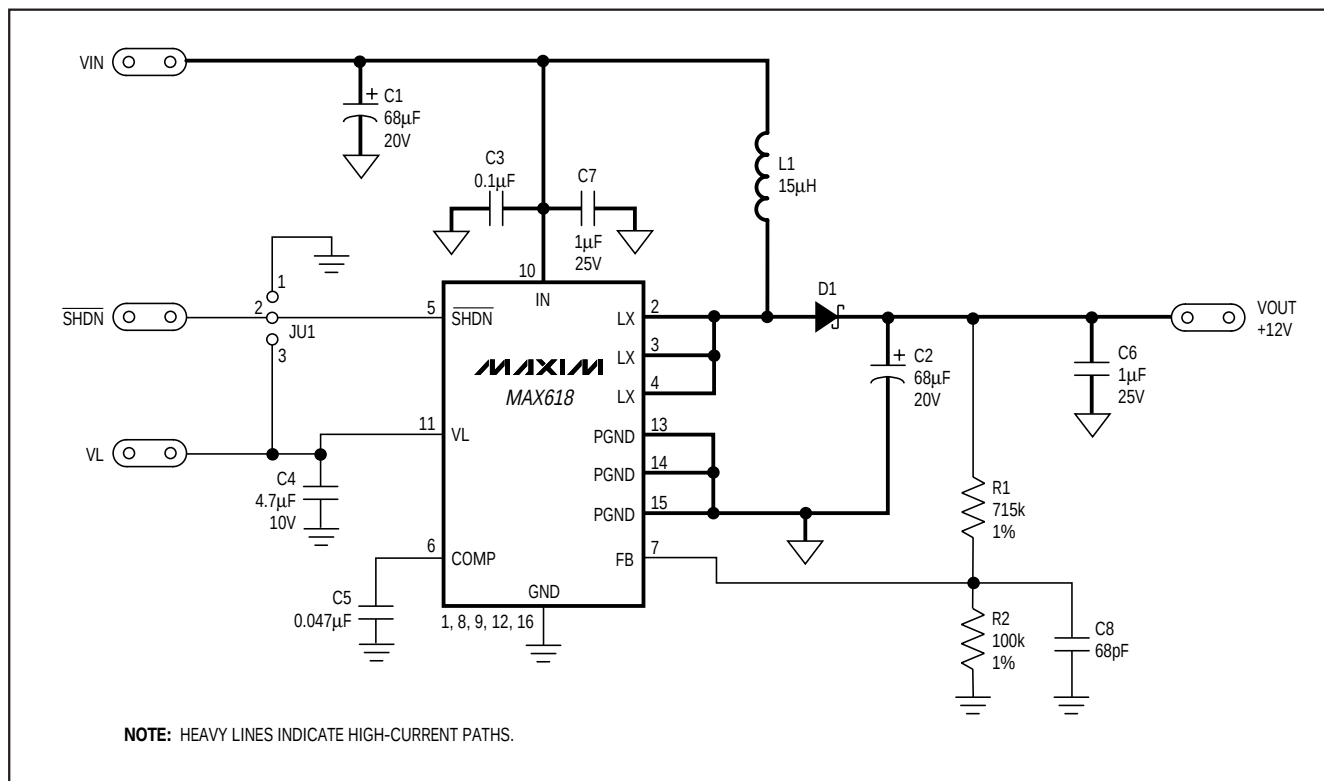


Figure 1. MAX618 EV Kit Schematic

MAX618 Evaluation Kit

Evaluates: MAX618

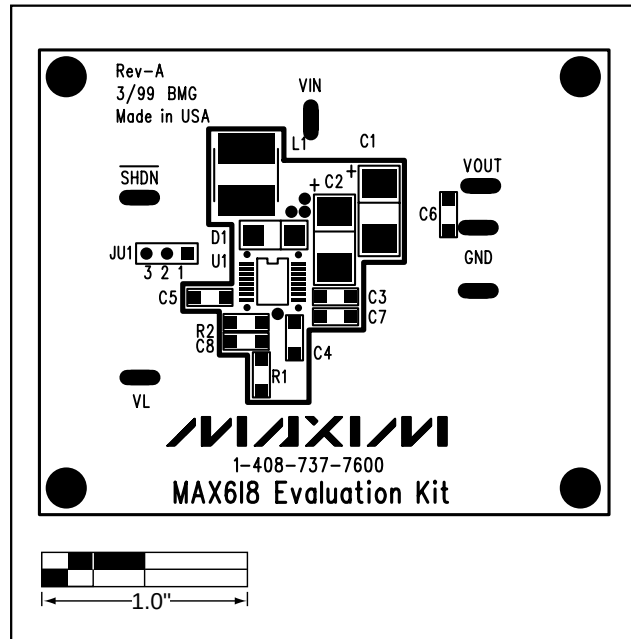


Figure 2. MAX618 EV Kit—Component Placement Guide

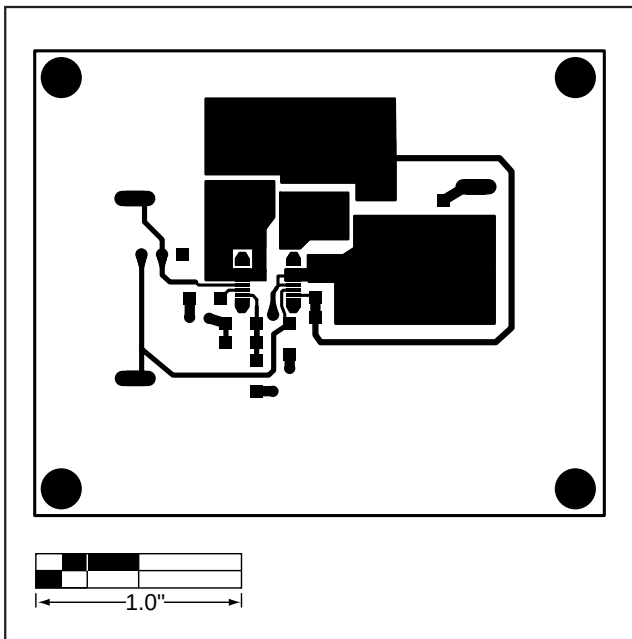


Figure 3. MAX618 EV Kit PC Board Layout—Component Side

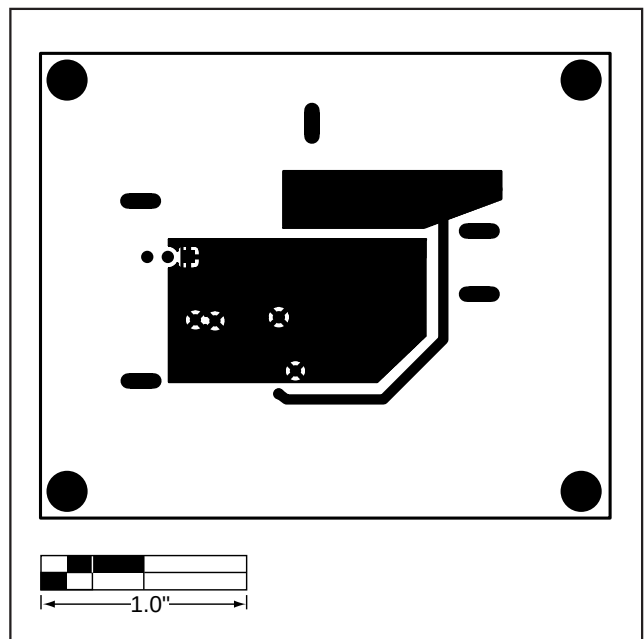


Figure 4. MAX618 EV Kit PC Board Layout—Solder Side

MAX618 Evaluation Kit

NOTES

MAX618 Evaluation Kit

NOTES

Evaluates: MAX618

MAX618 Evaluation Kit

NOTES

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

6 _____ Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600