
Power Entry Module with Optional RFI Power Line Filters for General and **Medical Applications**

M Series







The M series power entry modules offer the most choices of power entry components and filtering options to fit a specific need. The fully configured M series expands the options of a manufacturer whose products are marketed worldwide. One component, fully assembled and tested, provides the capability of interfacing a multi-voltage power supply to any common voltage or fusing scheme in the world, without modification.

- The IEC connector provides an internationally accepted power entry termination, which can be used with a variety of line cords.
- The selectable fuseholder allows use of single or dual European fuses, or a single North American fuse.
- The optional DPST on/off switch breaks both sides of the line and is labeled with the international I/O markings.
- The optional voltage selector provides a convenient means to change transformer primary connection, and it is available in both 2-voltage and 4-voltage configurations.
- The series is available with four filter circuits to meet a variety of applications, and convenient connections are provided on unfiltered models to allow wiring of a separate RFI filter.

The M series is a family of components offering greater flexibility and cost-effectiveness in the selection of primary power components. Wiring to the modules is accomplished via .110" terminals for labor savings and convenience.

Four filter circuits provide a choice of attenuation tailored to specific categories of susceptibility and emissions needs.

HM Models – This medical filter provides susceptibility protection without the leakage current associated with line-to-ground capacitors. Designed to allow equipment to meet UL544 for patient care and non-patient care equipment, the HM filter has a maximum leakage current of 2 µA at 120 VAC 60 Hz. See Appendix C for more information on medical applications and UL standards.




FM Models - General purpose RFI filter designed for susceptibility applications, effectively providing RFI control of line-to-ground noise. The design is compact and meets the very low leakage current requirements of VDE portable equipment as well as (120 Volt) UL544 non-patient medical equipment.

XM Models – High performance RFI filter designed to bring most digital equipment (including switching power supplies) into compliance with FCC Part 15J, Class B conducted emissions limits.

ZM Models – Premium RFI filter designed to bring most digital equipment (including switching power supplies) into compliance with EN55022, Level B (as well as FCC Part 15J, Class B) conducted emissions limits.

Fuse Installation Instructions

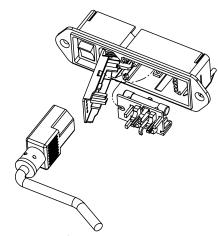

- 1. Remove power cord.
- 2. Pry door open at socket.


Germany:

- 3. Lift and swing door into socket.
- Lift fuse holder out of housing.
- Install one (1) AG fuse or two (2) metric fuses*.
- Replace fuse holder into housing.
- 7. Swing and snap door back in place.

*Install fuses on one side only, do not install both AG and metric fuses at the same time.

49-89-6089-0







Power Entry Module with Optional RFI Power Line Filters for General and Medical Applications (Continued)

M Series

UNFILTERED MODELS

Part Number	Current Rating @120VAC (Amps)	Current Rating 250VAC (Amps)	Available Voltage Selection Position*	DPST On/Off Switch	Mounting Style	Fuseholder Type
6VM1	6	6	1	-	Flange	Selectable
6VM1C	6	6	1	-	Snap-in	Selectable
6VM1S	6	4	1	•	Flange	Selectable
6VM1SC	6	4	1	•	Snap-in	Selectable
6VM2	6	6	2	-	Flange	Selectable
6VM2S	6	6	2	•	Flange	Selectable
6VM4	6	6	4	-	Flange	Selectable
6VM4C	6	6	4	-	Snap-in	Selectable
6VM4S	6	4	4	•	Flange	Selectable
6VM4SC	6	4	4	•	Snap-in	Selectable


^{* 1 - 120}V/240V Fixed 2 - 120/240 V Selectable

FII TERED MODELS


JUELS						
RFI Filter Type†	Current Rating @120VAC (Amps)	Current Rating @250VAC (Amps)	Available Voltage Selection Position	DPST On/Off Switch	Mounting Style	Fuseholder Type
Medical ¹	5	4	1	_	Flange	Selectable
Medical ¹	5	4	1	•	Flange	Selectable
Medical ¹	5	4	4	_	Flange	Selectable
Medical ¹	5	4	4	•	Flange	Selectable
General Purpose	e ² 5	4	1	_	Flange	Selectable
General Purpose	e ² 5	4	1	_	Snap-in	Selectable
General Purpose	e ² 5	4	1	•	Flange	Selectable
General Purpose	e ² 5	4	1	•	Snap-in	Selectable
General Purpose	e ² 5	4	4	_	Flange	Selectable
General Purpose	e ² 5	4	4	_	Snap-in	Selectable
General Purpose	e ² 5	4	4	•	Flange	Selectable
General Purpose	e ² 5	4	4	•	Snap-in	Selectable
SMPS FCC-B3	3	2	1	•	Flange	Selectable
SMPS FCC-B3	3	2	4	_	Flange	Selectable
SMPS FCC-B3	3	2	4	•	Flange	Selectable
SMPS EN55022-	·B ⁴ 3	2	1	•	Flange	Selectable
SMPS EN55022-	·B⁴ 3	2	4	_	Flange	Selectable
SMPS EN55022-	·B⁴ 3	2	4	•	Flange	Selectable
	RFI Filter Type† Medical¹ Medical¹ Medical¹ Medical¹ Medical¹ General Purposi SMPS FCC-B³ SMPS FCC-B³ SMPS EN55022- SMPS EN55022- SMPS EN55022-	RFI Current Rating Filter @120VAC Typet (Amps) Medical¹ 5 General Purpose² 5	RFI Filter Filter Filter Type† @120VAC (Amps) @250VAC (Amps) Medical¹ 5 4 General Purpose² 5 4 General Purpose²	RFI Filter Filter Filter Type† © 120VAC (Amps) © 250VAC (Amps) Selection Position Medical¹ 5 4 1 Medical¹ 5 4 1 Medical¹ 5 4 4 General Purpose² 5 4 1 General Purpose² 5 4 1 General Purpose² 5 4 1 General Purpose² 5 4 4 General Purpose² 5	RFI Filter Filter Filter Type† © 120VAC (Amps) © 250VAC (Amps) Selection Position DPST On/Off Switch Medical¹ 5 4 1 - Medical¹ 5 4 1 - Medical¹ 5 4 4 - General Purpose² 5 4 1 - General Purpose² 5 4 1 - General Purpose² 5 4 4 - General Purpose² 5 4 4 - General Purpose² 5 4 4 -	RFI Filter Filter Filter Type† © 120VAC (Amps) © 250VAC (Amps) Selection Position DPST On/Off Switch Mounting Style Medical¹ 5 4 1 - Flange Flange Flange Flange Flange Flange Flange Flange Medical¹ 5 4 1 - Flange

Fuse Changing

European Fusing Arrangement**

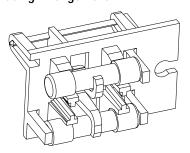

North American Fusing Arrangement**

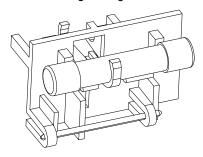

^{**}Install fuses on one side only. Do Not install both AG and Metric fuses at the same time.

USA Cust. Svc.: 1-800-468-2023 CORCOM Prods: 1-847-680-7400 1-508-992-4495

49-89-6089-0

Germany:

www.cor.com www.tycoelectronics.com

^{4 - 100}V, 120V, 230V, 240V Selectable

[•] Includes DPST switch

Includes DPST switch
 Medical filter for very low leakage UL 544 health care applications.

²General purpose filter for susceptibility applications.

³ Emissions filter for switching power supply applications where FCC-B level requirements must be met.

⁴ Emissions filter for switching power supply applications where EN55022-B level requirements must be met.

Refer to page 97 for more information on available RFI filter types. * 1 - 120V/240V Fixed 4 - 100V, 120V, 230V, 240V Selectable



Power Entry Module with Optional RFI Power Line Filters for General and Medical Applications (Continued)

M Series

Specifications – Unfiltered Models

Hipot rating (one minute):

line-to-ground 1500 VAC line-to-line 1450 VDC line-to-load (switch off) 2500 VAC

Operating voltages: 100, 120, 230, 240 VAC Operating frequency: 50/60 Hz

Switch: Double-insulated, rated for 100,000 operations at full load.

10,000 operations at 70 Amps inrush current.


Fuse (not included): Reversible fuseholder, accepts

> one 1/4" x 1-1/4" fuse or two 5 x 20 mm fuses.


Terminals: .110 [2.79] terminals

Electrical Schematics – Unfiltered Models


VM (1-Voltage)

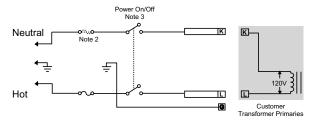

VM (2-Voltage)



VM (4-Voltage)

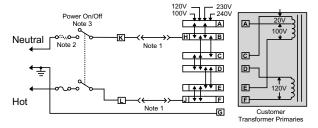

Jumpers required if no input filter is used. Note 1: Note 2: Provision for dual European style fusing. On/off switch present only with "S" suffix. Note 3:

When using a center-tapped transformer, the C-F winding should Note 4: be the low voltage (high current) winding and must be capable of

handling the full primary current in the 120V position.

Specifications - Filtered Models

Maximum leakage current, each line-to-ground

	<u>HM</u>	<u>FM</u>	XM/ZM
@ 120 VAC 60 Hz:	2μΑ	.25 mA	.30 mA
@ 250 VAC 50 Hz:	5μΑ	.50 mA	.50 mA

Hipot rating (one minute):

line-to-ground: HM Models 1500 VAC FM/XM/ZM 1500 VAC line-to-line All Models 1450 VDC Operating voltages: 100, 120, 230, 240 VAC

Operating frequency: 50/60 Hz Rated voltage (max.): 250 VAC

Switch: Double-insulated, rated for 100,000 operations at full load.

10,000 operations at 70 Amps inrush current.

Reversible fuseholder, accepts Fuse (not included):

one 1/4" x 1-1/4" fuse or two 5 x 20 mm fuses

Terminals: .110 [2.79] terminals

Minimum insertion loss in dB:

Line-to-ground in 50 ohm circuit


Current	Frequency-MHz									
Rating	.01	.05	.15	.5	1	5	10	30		
НМ										
5A	-	-	14	18	19	22	22	17		
FM										
5A	-	-	14	21	26	40	45	40		
XM										
3A	2	13	23	40	46	44	44	44		
ZM										
3A	15	29	39	46	43	40	40	40		

Line-to-line in 50 ohm circuit

Current		Frequency-MHz									
Rating	.02	.03	.05	.07	.15	.5	1	5	10	30	
XM											
3A	-	-	-	5	34	62	68	60	50	40	
ZM											
3A	5	13	28	37	55	75	75	62	54	44	

230V Nomenclature relates to pending European CENELEC agreement.







Power Entry Module with Optional RFI Power Line Filters for General and Medical Applications (Continued)

M Series


Case Dimensions - Unfiltered Models

Part No.	A (max)	B ±0.01 ± 0.25	C (max)	D (max)	E (max)	F
6VM1	3.39	2.84	1.14	2.44	1.45	2.5
	86.1	72.1	29.0	62.0	36.8	63.5
6VM1C	2.56		1.14	2.44	1.45	2.5
	86.1		29.0	62.0	36.8	63.2
6VM1S	4.17	3.62	1.14	3.22	1.45	3.28
	105.9	91.9	29.0	81.8	36.8	83.3
6VM1SC	3.34		1.14	3.27	1.45	3.27
OVIVITOO	84.8		29.0	83.1	36.8	83.1
6VM2	3.88	3.32	1.14	2.92	1.45	2.98
6VM4	98.6	84.3	29.0	74.2	36.8	75.7
6VM4C	3.04		1.14	2.92	1.45	2.97
O V IVI + O	98.6		29.0	74.2	36.8	75.4
6VM2S	4.65	4.1	1.14	3.72	1.45	3.76
6VM4S	118.1	104.1	29.0	94.5	36.8	95.5
6VM4SC	3.82		1.14	3.7	1.45	3.75
O V IVI-OC	97.0		29.0	94.0	36.8	95.3

Voltage Selection

To change selected voltage: open cover, using small blade screwdriver or similar tool; set aside cover/fuse block assembly; pull voltage selector card straight out of housing, using indicator pin; orient selector card so that desired voltage is readable at the bottom; orient indicator pin to point up when desired voltage is readable at bottom (note that when indicator pin is fixed, successive voltages are selected by rotating the card 90° clockwise); insert voltage selector card into housing, printed side of card facing forward toward IEC connector and edge containing the desired voltage first; replace cover, and verify that indicator pin shows the desired voltage.


Voltage Selector Card Orientation

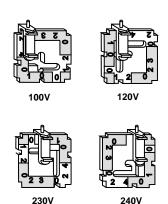

Case Dimensions - Filtered Models

Part No.	A (max)	B ±0.01 ±0.25	C (max)	D (max)	E (max)	F	G
5EFM1	3.39	2.84	1.14	2.44	2.19	2.5	
5EHM1	86.1	72.1	29.0	62.0	55.6	63.5	
5EFM1C	2.56		1.14	2.44	2.19	2.49	
	65.0		29.0	62.0	55.6	63.2	
5EFM1S	4.17	3.62	1.14	3.22	2.19	3.28	_
5EHM1S	105.9	91.9	29.0	81.8	55.6	83.3	
5EFM1SC	3.34	_	1.14	3.27	2.19	3.27	_
0200	84.8		29.0	83.1	55.6	83.1	
5EFM4	3.88	3.32	1.14	2.92	2.19	2.98	
5EHM4	98.6	84.3	29.0	74.2	55.6	75.7	
5EFM4C	3.04		1.14	2.92	2.19	2.97	
OLI WHO	77.2		29.0	74.2	55.6	75.4	
5EFM4S	4.65	4.1	1.14	3.7	2.19	3.76	
5EHM4S	118.1	104.1	29.0	94.0	55.6	95.5	
5EFM4SC	3.82		1.14	3.7	2.19	3.75	
OLI WHOO	97.0		29.0	94.0	55.6	95.3	
3EXM1S	4.17	3.62	1.14	3.22	1.72	3.28	3.3
3EZM1S	105.9	91.9	29.0	81.8	43.7	83.8	83.8
3EXM4	3.88	3.32	1.14	2.92	1.72	2.98	2.99
3EZM4	98.6	84.3	29.0	74.2	43.7	75.7	75.9
3EXM4S	4.65	4.1	1.14	3.72	1.72	3.76	3.8
3EZM4S	118.1	104.1	29.0	94.5	43.7	95.5	96.5

Recommended Panel Cutout

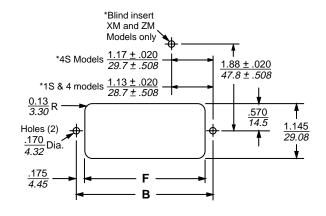

Note: Snap-in models allow front mount only.

XM and ZM models allow back mount only.

FM and HM models allow front or back mounting.

Accessories for M series include interconnection assembly, medical standoff bracket, voltage selector cards, and insulating shroud. See page 131.

49-89-6089-0

All mounting holes countersunk.

Germany:

Catalog 1654001

Revised 03-04

USA Cust. Svc.: 1-800-468-2023 CORCOM Prods: 1-847-680-7400 1-508-992-4495 www.cor.com www.tycoelectronics.com





Power Entry Module with Optional RFI Power Line Filters for General and Medical Applications (Continued)

M Series


Case Styles - Unfiltered Models

6VM1 (IEC Connector, Selectable Fuseholder)







6VM1C (IEC Connector, Selectable Fuseholder, Snap-in)






6VM1S (IEC Connector, DPST On/Off Switch, Selectable Fuseholder)






6VM1SC (IEC Connector, DPST On/Off Switch, Selectable Fuseholder, Snap-In)






Recommended Panel Cutout (Snap-In Only)




Typical dimensions:

Mounting Holes: .155 [3.94] Dia. (2) with .279 [7.09] Dia. x 82* Countersunk. All mounting holes countersunk. Panel Thickness: .06 - .09 [1.53 -2.29]


6VM2 & 6VM4 (IEC Connector, Voltage Selector, Selectable Fuseholder)



6VM4C (IEC Connector, Voltage Selector, Selectable Fuseholder, Snap-In)




6VM2S & 6VM4S (IEC Connector, DPST On/Off Switch, Voltage Selector, Selectable Fuseholder)



6VM4SC (IEC Connector, DPST On/Off Switch, Voltage Selector, Selectable Fuseholder, Snap-In)

1-508-992-4495

49-89-6089-0








Power Entry Module with Optional RFI Power Line Filters for General and Medical Applications (Continued)


M Series

Electrical Schematics - Filtered Models

FM & HM (1-Voltage)

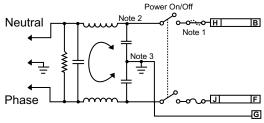


FM & HM (4-Voltage)

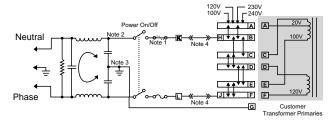


Case Styles - Filtered Snap-In Models


5EFM1C (IEC Connector, Selectable Fuseholder)

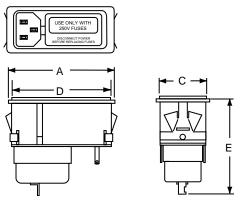


5EFM4C (IEC Connector, Voltage Selector, Selectable Fuseholder)

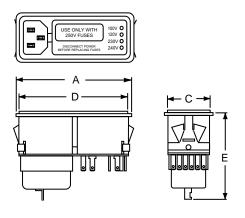


XM & ZM (1-Voltage)

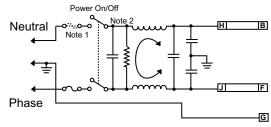


XM & ZM (4-Voltage)



5EFM1SC (IEC Connector, DPST On/Off Switch, Selectable Fuseholder)

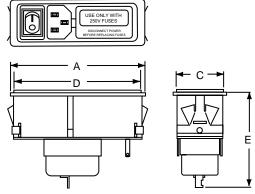

5EFM4SC (IEC Connector, DPST On/Off Switch, Voltage Selector, Selectable Fuseholder)

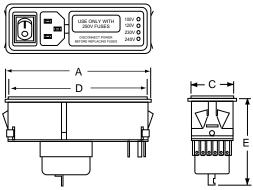

Note 1: Provision for dual fusing (Euro standard) Note 2: Power on/off switch with suffix "S" only

Germany:

Note 3: HM models without line-to-ground capacitors

Note 4: Models HM4, FM4, XM4, and ZM4 have added terminals K and L. External switch or jumper must be placed from K to H and L to J. 230V Nomenclature relates to pending European CENELEC agreement.


49-89-6089-0


M Series

Case Styles - Filtered Models


5EHM1 & 5EFM1 (IEC Connector, Selectable Fuseholder)









5EHM1S & 5EFM1S (IEC Connector, DPST On/Off Switch, Selectable Fuseholder)



5EHM4 & 5EFM4 (IEC Connector, DPST On/Off Switch, Selectable Fuseholder)



5EHM4S & 5EFM4S (IEC Connector, DPST On/Off Switch, Voltage Selector, Selectable Fuseholder)

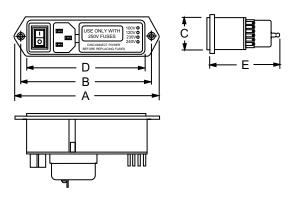

Typical dimensions:

Torque: 7 in. lb max.


Holes: .055 [1.40] Dia. ±.004 [±.10] except solder lug ground tap with wire wrap. Mounting Holes: .155 [3.94] Dia.

All parts typical


Note: Mounting holes on tabs are countersunk and take a #6 flathead screw.

Case Styles - Filtered Models


3EXM4 & 3EZM4 (IEC Connector, Voltage Selector, Selectable Fuseholder)

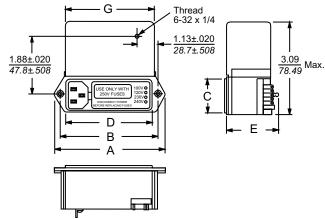

3EXM1S & 3EZM1S (IEC Connector, DPST On/Off Switch, Selectable Fuseholder)

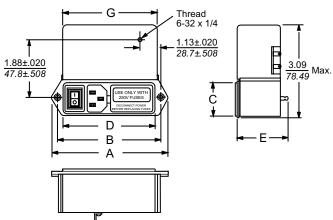

3EXM4S & 3EZM4S (IEC Connector, DPST On/Off Switch, Voltage Selector, Selectable Fuseholder)

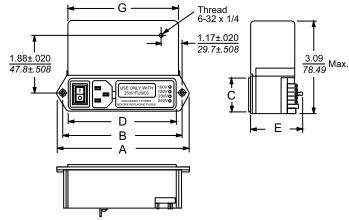

Germany:

49-89-6089-0

www.cor.com www.tycoelectronics.com